

```

SA structure test
Selected family ..... N40P
Model ..... Maxtor N40P
Firmware ..... NAR61EA0
Serial .....
Min. cylinder ..... 0
Max. cylinder ..... 4294967295
Checking UList
Id ..... 37
Read ..... Yes
Header ..... U_LIST00
Checksum ..... Ok
The number of SA defects ..... No
P-List size ..... 5
HDD configuration module
Error ..... UBA 8 Reading error : Maxtor techno command error. Command : 53. Code : 0111 C/H/S : 352/3/8
Checking Calibration adaptives
Id ..... 1E
Read ..... Yes
Header ..... SRV6R]
Checksum ..... Ok
Checking User data adaptives
Error ..... UBA 354 Reading error : Maxtor techno command error. Command : 53. Code : 0111 C/H/S :
352/3/354
Checking Zone Table
Read ..... Yes
# : Start Cyl: End Cyl: SPT
-----
1 : 352: 411: 540
2 : 412: 5278: 1140
3 : 5279: 11018: 1125
4 : 11019: 16642: 1105
5 : 16643: 29027: 1080
6 : 29028: 34922: 1044
7 : 34923: 40236: 1020
8 : 40237: 46449: 990
9 : 46450: 51301: 960
10 : 51302: 54738: 936
11 : 54739: 61793: 900
12 : 61794: 65428: 864
13 : 65429: 68486: 840
14 : 68487: 72980: 810
15 : 72981: 76346: 780
16 : 76347: 79589: 750
17 : 79590: 83950: 720
Checking ROM Copy
Checksum ..... Ok
Check sum Value ..... 500A
Checking ATA overlays
Header1 ..... MO
Header2 ..... E000
OverlayId ..... 0003
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E000
OverlayId ..... 0004
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E000
OverlayId ..... 0005
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E000
OverlayId ..... 0006
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E000
OverlayId ..... 0007
ROM CRC ..... Ok
Checksum ..... Ok
Checking Techno mode overlays
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 0008
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 0009
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 000A
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 000B
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 000C
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 000D
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 000E
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.

```

```

OverlayId ..... 000F
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 0010
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 0011
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 0012
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 0013
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 0014
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 0015
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 0016
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 0017
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 0018
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 0019
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 001A
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E000
OverlayId ..... 001B
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E000
OverlayId ..... 001C
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 001D
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 001E
ROM CRC ..... Ok
Checksum ..... Ok
Header1 ..... MO
Header2 ..... E0{.
OverlayId ..... 001F
ROM CRC ..... Ok
Checksum ..... Ok
Checking RZTbl
Checksum ..... Ok
Checking P-List
Error ..... UBA 164 Reading error : Maxtor techno command error. Command : 53. Code : 0111 C/H/S :
352/3/164
Checking G-List
Checksum ..... Ok
Checking RZTbl-PList
Error ..... UBA 164 Reading error : Maxtor techno command error. Command : 53. Code : 0111 C/H/S :
352/3/164
Checking HLists
Block0
Header ..... UHRS0000
Defect Count ..... 400
Checksum ..... Ok
Block1
Header ..... UHRS0010
Defect Count ..... 8
Checksum ..... Ok
Checking security
Header ..... SECU
Checksum ..... Ok
User Password ..... *****
Master Password ..... *Maxtor*INIT SECURITY TEST STEP*F*
User password setup ..... No
Master code ..... FFFE
Security level ..... HIGH
Checking S.M.A.R.T.
[SMRT_T] ..... Ok

```

```
[SMRT_A] ..... Ok
[SMRT_AC] ..... Ok
[SMART_SUMMAR] ..... Ok
[SMART_ST] ..... Ok
[SMART_HOSTV] ..... Ok
Checking [DISK/PW]
Error ..... Wrong Module Id "93"
Checking All
Module 00 ..... Ok
Module 01 ..... Ok
Module 03 ..... Ok
Module 04 ..... Ok
Module 05 ..... Ok
Module 08 ..... Ok
Module 09 ..... Ok
Module 0A ..... Ok
Module 0B ..... Ok
Module 0C ..... Ok
Module 0D ..... Ok
Module 0E ..... Ok
Module 0F ..... Ok
Module 10 ..... Ok
Module 11 ..... Ok
Module 12 ..... Ok
Module 13 ..... Ok
Module 14 ..... Ok
Module 16 ..... Ok
Module 18 ..... UBA 164 Reading error : Maxtor techno command error. Command : 53. Code : 0111 C/H/S :
352/3/164
Module 19 ..... Ok
Module 1A ..... Ok
Module 1B ..... Ok
Module 1C ..... Ok
Module 1D ..... Ok
Module 1E ..... Ok
Module 1F ..... UBA 8 Reading error : Maxtor techno command error. Command : 53. Code : 0111 C/H/S : 352/3/8
Module 20 ..... Ok
Module 21 ..... UBA 354 Reading error : Maxtor techno command error. Command : 53. Code : 0111 C/H/S :
352/3/354
Module 22 ..... Ok
Module 24 ..... Ok
Module 27 ..... Ok
Module 28 ..... Ok
Module 29 ..... Ok
Module 2A ..... Ok
Module 2B ..... Ok
Module 2D ..... Ok
Module 2F ..... Ok
Module 30 ..... Ok
Module 32 ..... Ok
Module 33 ..... Ok
Module 34 ..... Ok
Module 37 ..... Ok
Module 38 ..... Ok
Module 39 ..... Ok
Module 41 ..... Ok
Module 42 ..... Ok
Module 43 ..... Ok
Module 44 ..... Ok
Module 45 ..... Ok
Module 46 ..... Ok
Module 47 ..... Ok
Module 48 ..... Ok
Module 49 ..... Ok
Module 4A ..... Ok
Module 4B ..... Ok
Module 4C ..... Ok
Module 4D ..... Ok
Module 4E ..... Ok
Module 4F ..... Ok
Module 54 ..... Ok
Module 55 ..... Ok
Module 56 ..... Ok
Module 57 ..... Ok
Module 58 ..... Ok
Module 59 ..... Ok
Module 5A ..... Ok
Module 5B ..... Ok
Module 5C ..... Ok
Module 5D ..... Ok
Module 5E ..... UBA 758 Reading error : Maxtor techno command error. Command : 53. Code : 0111 C/H/S :
353/3/219
Module 5F ..... Ok
Module 60 ..... Ok
Module 61 ..... Ok
Module 62 ..... Ok
Module 63 ..... Ok
Module 64 ..... Ok
Module 65 ..... Ok
Module 66 ..... Ok
Module 67 ..... Ok
Module 68 ..... Ok
Module 69 ..... Ok
Module 6A ..... Ok
Module 6B ..... Ok
Module 70 ..... Ok
Module 71 ..... Ok
Module 72 ..... Ok
Module 73 ..... Ok
Module 74 ..... Ok
Module 75 ..... Ok
Module 76 ..... Ok
Module 77 ..... Ok
Module 78 ..... Ok
Module 79 ..... Ok
Module 7A ..... Ok
Module 7B ..... Ok
Module 7C ..... Ok
Module 7D ..... Ok
Module 7E ..... Ok
Module 7F ..... Ok
Module 80 ..... Ok
```

Module 81 ..... Ok  
Module 82 ..... Ok  
Module 83 ..... Ok  
Module 84 ..... Ok  
Module 85 ..... Ok  
Module 86 ..... Ok  
Module 87 ..... Ok  
Module 88 ..... Ok  
Module 89 ..... Ok  
Module 8A ..... Ok  
Module 8B ..... Ok  
Module 8D ..... Ok  
Module 8E ..... Ok  
Module 8F ..... Ok  
Module 92 ..... Ok  
Module 94 ..... Ok  
Module 95 ..... Ok  
Module 96 ..... Ok  
Module 97 ..... Ok  
Module 98 ..... Ok  
Module 99 ..... Ok  
Module 9A ..... Ok  
Module 9B ..... Ok  
Module 9C ..... Ok  
Module 9D ..... Ok  
Module 9E ..... Ok  
Module 9F ..... Ok  
Module A0 ..... Ok  
Module A2 ..... Ok  
Module A3 ..... Ok  
Module A4 ..... Ok  
Module A5 ..... Ok  
Module A6 ..... Ok